
JACKSON RAILCAR

Slipform Grain Elevator (JRCN5001)

Assembly instructions

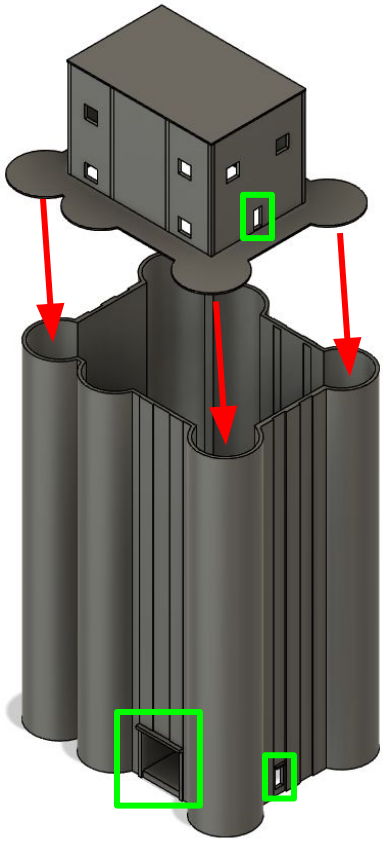

1. Note the orientation of the door on the headhouse and its relation to the front truck entrance and side door highlighted in green.
2. Center the top portion to the main body and glue the walls to the roof. The shorter ends will be flush with the bump outs. The roof should overhang the cylinders.
3. Glue wooden window and door frames to cut outs, apply putty if there is a gap, sand the plastic model if there is not enough space.

Note on parts

Additional doors and windows are included in the kit to provide spares, use these in case others break while you assemble the kit. Use a sharp exacto blade to cut windows out of the wood. Small tabs are in place to hold windows.

Note on warping

Small warping of corners along the bottom print are normal due to the long processing involved. These can be filled with putty or hidden with scenery.

Note on glue

CA or model glue will both work on this kit. If you find that the glue is not holding, sand the top of the model and bottom of the headhouse/roof. This will remove any paint and expose the plastic to the glue.